



Shipping Containers

Assembly Guide

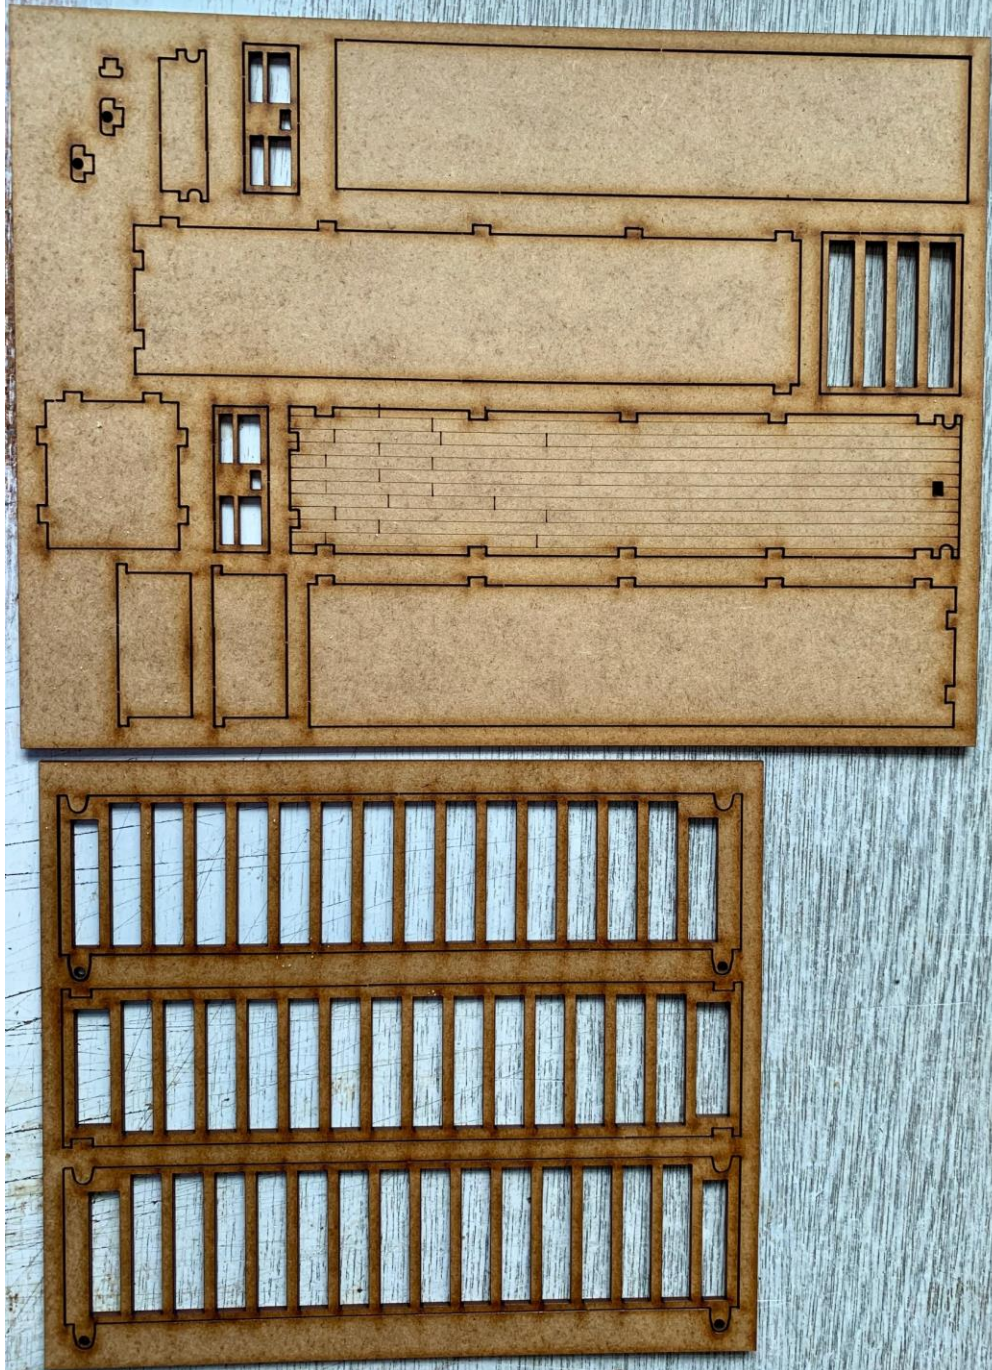

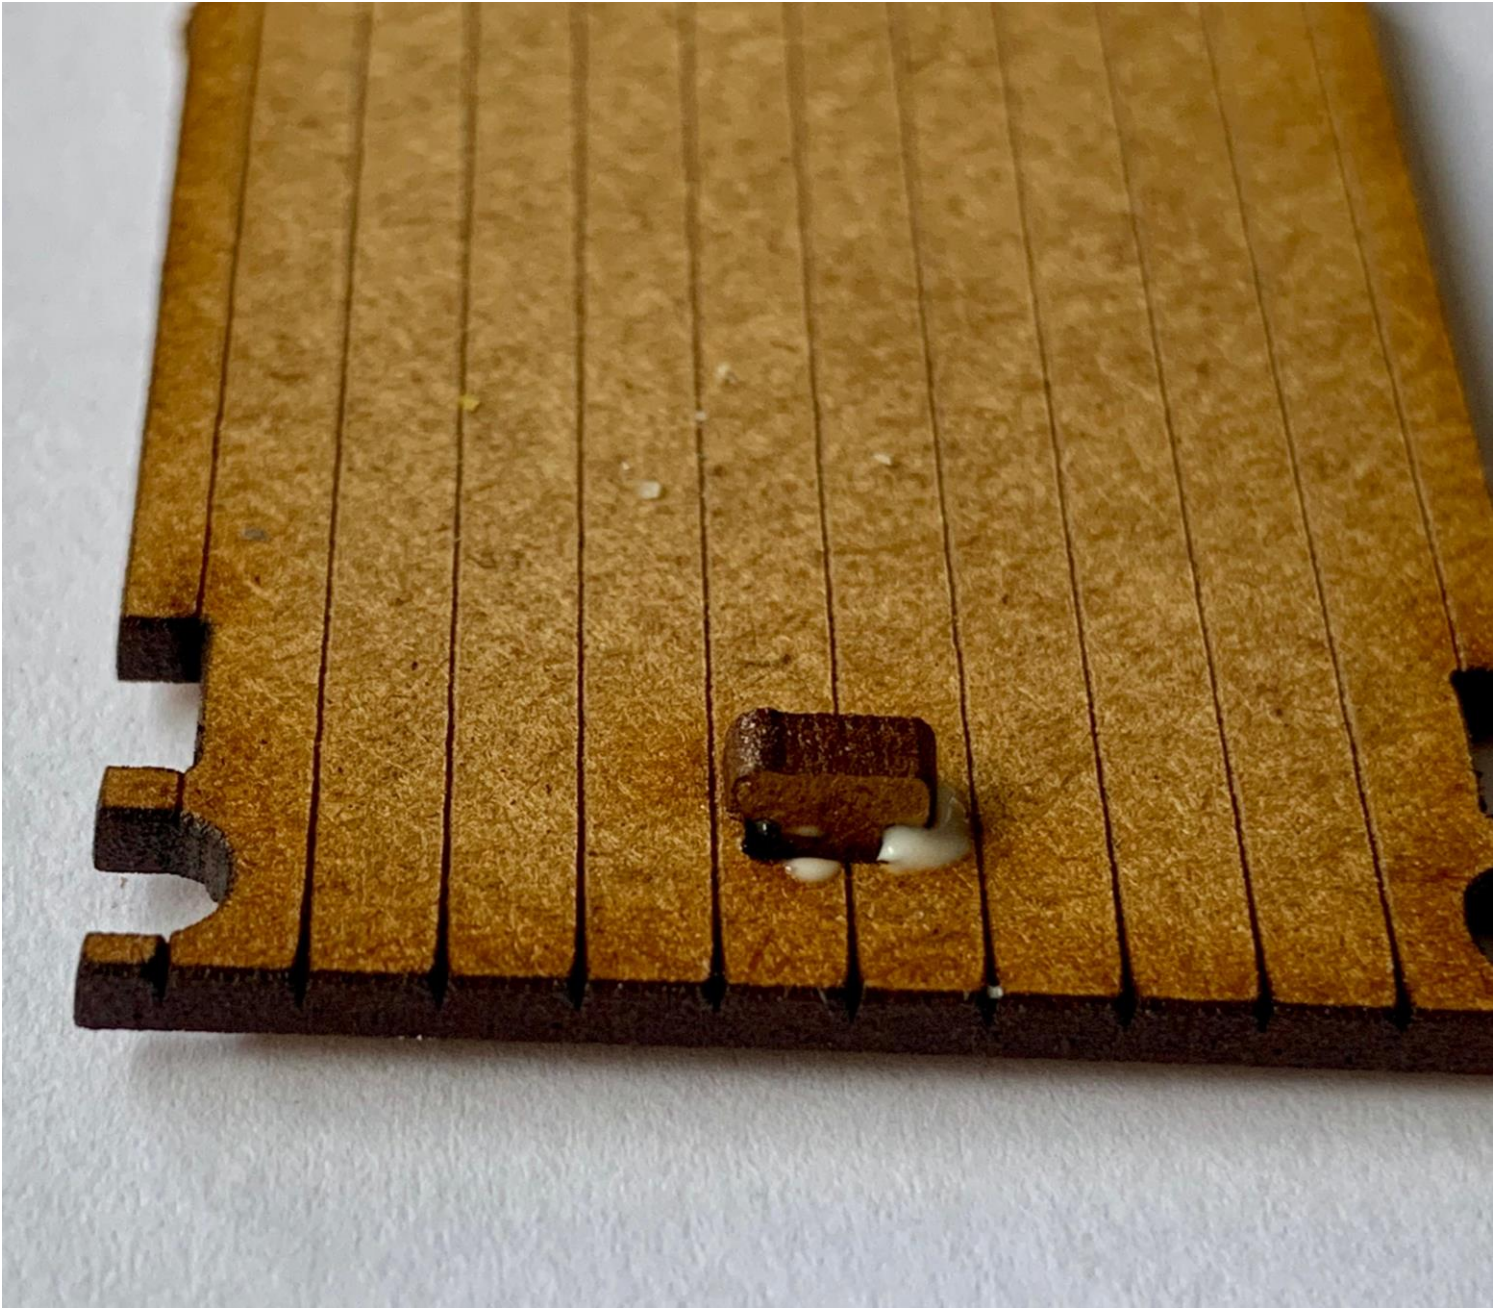





Roof section Glue
outer frame to base
but do not glue on
top of main
container this is a
removable roof



Note the end
section for the
roof/door
support

