


# Corner Type Building

## Assembly Guide



### Tools Required

You will need a craft knife + good quality PVA wood Glue

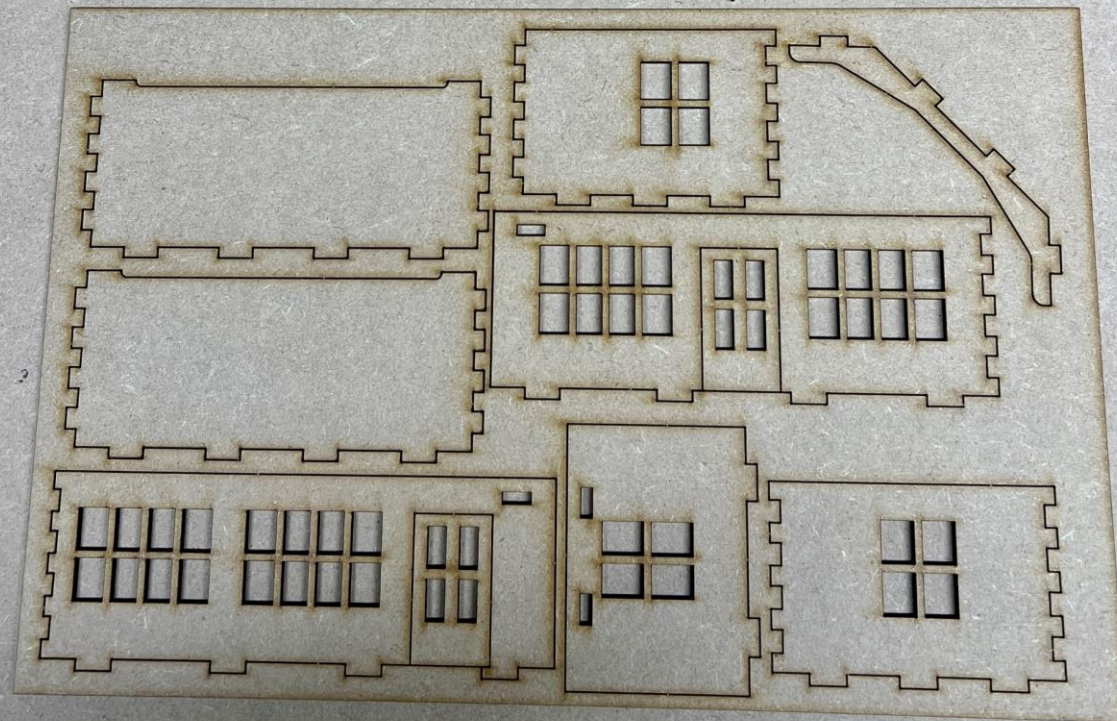





Glue the four together at 90 deg &  
allow the glue to set

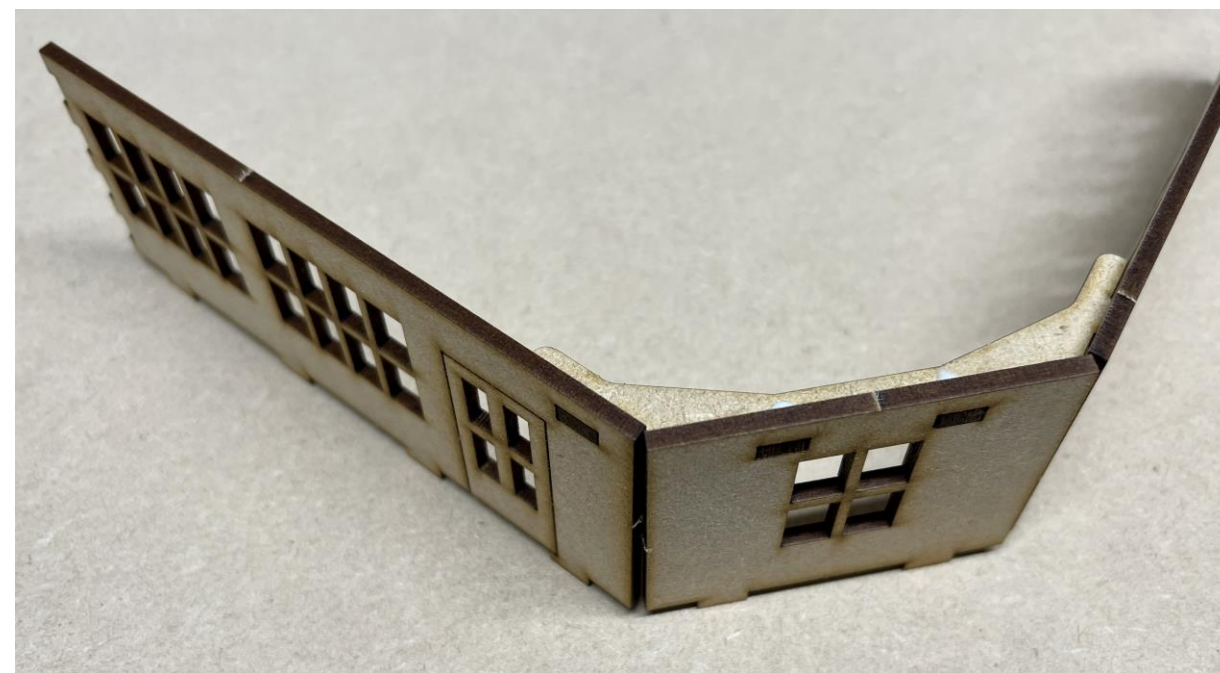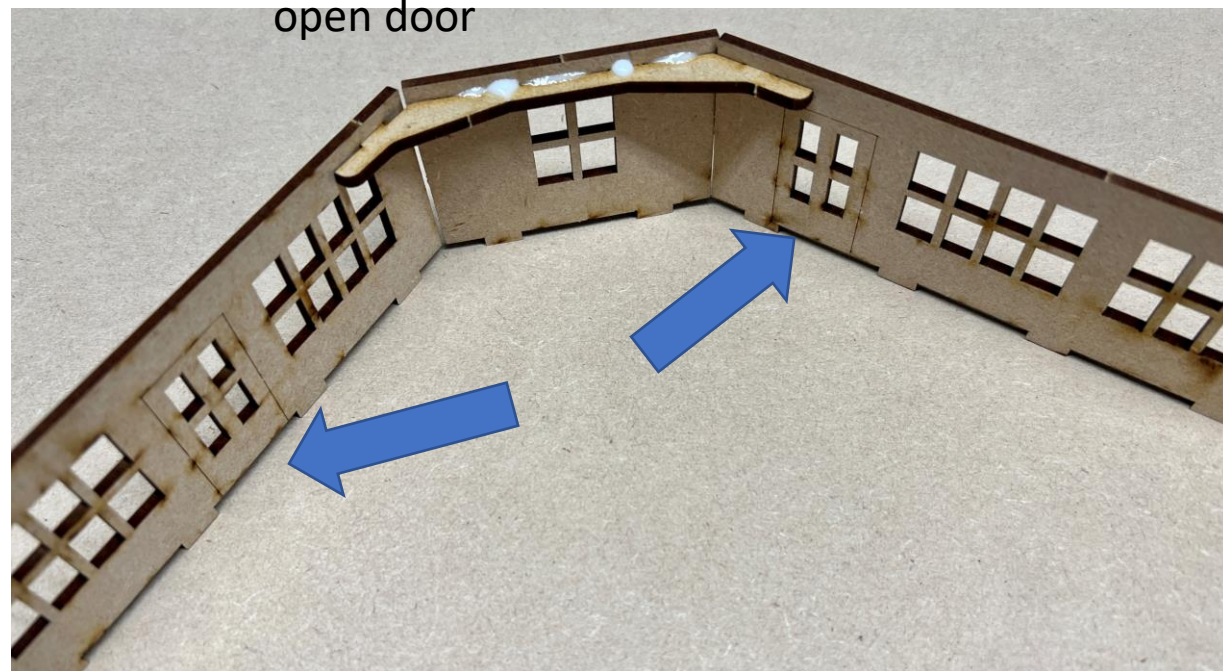



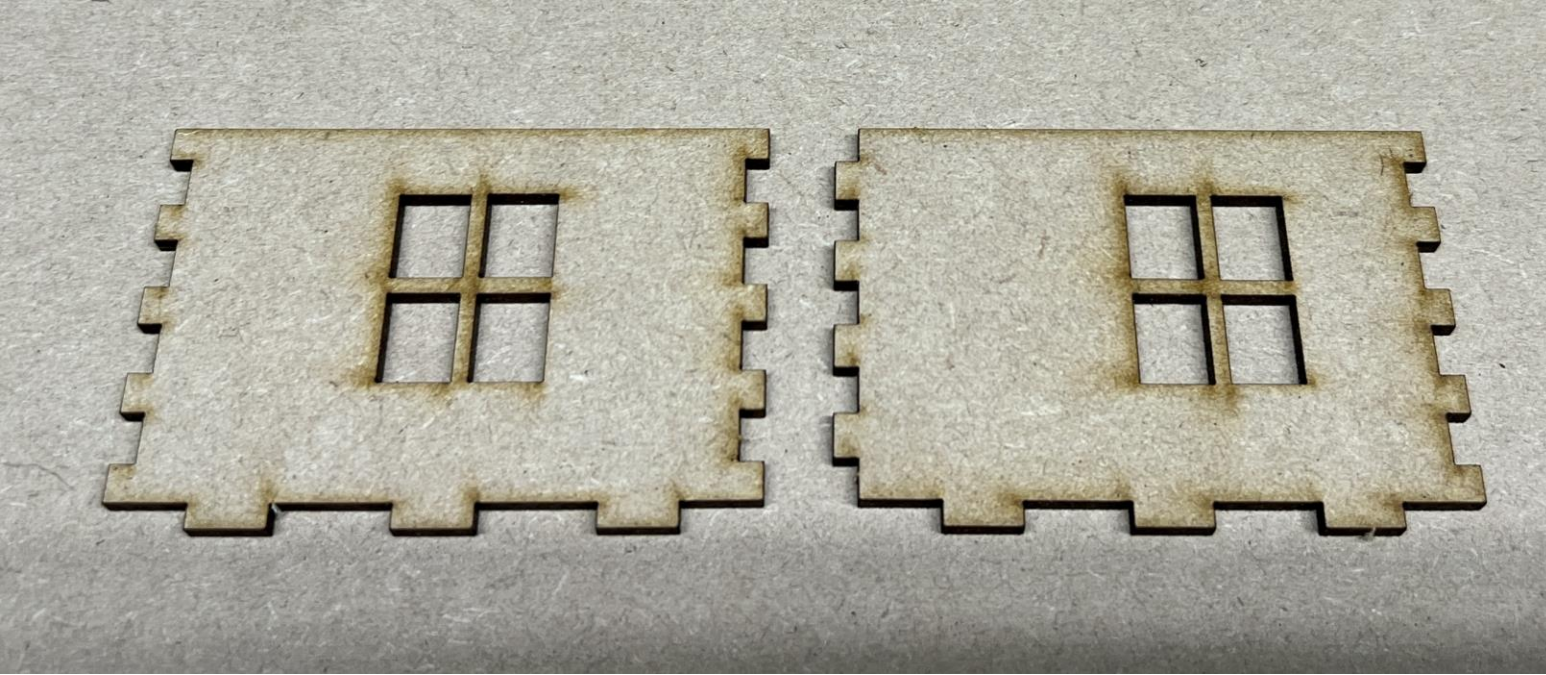

Glue the two sides  
together at 90 deg & allow  
the glue to partially set

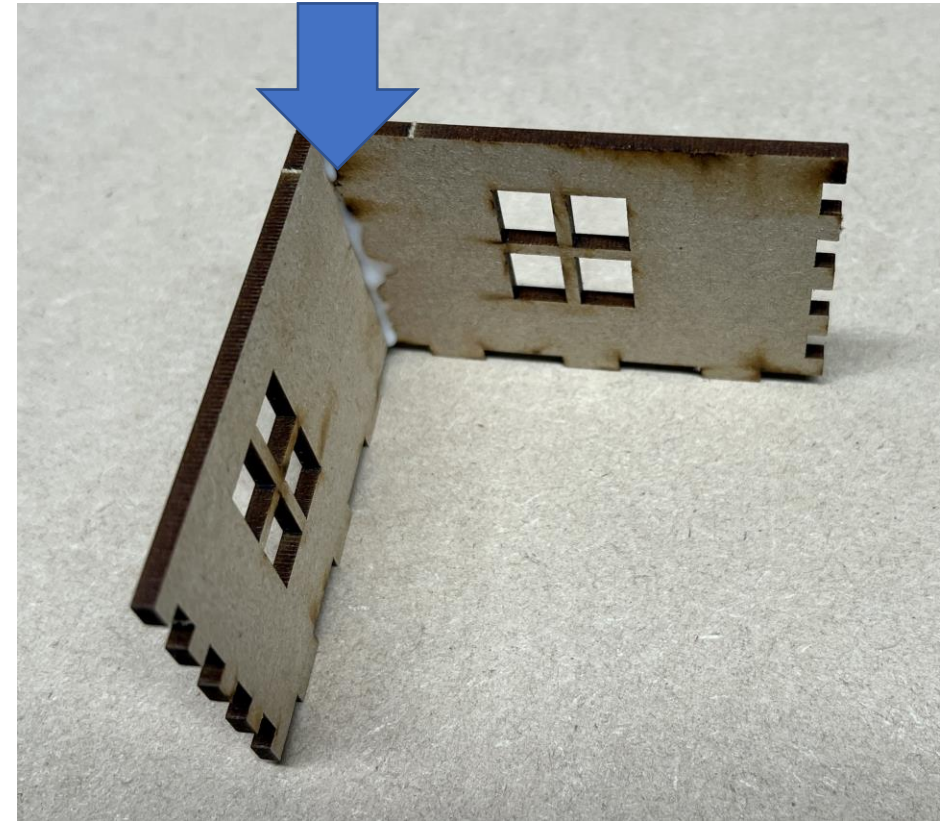





Glue both assemblies  
to the base






The doors are held in by 3 tabs,  
they be taken out if you want a  
open door

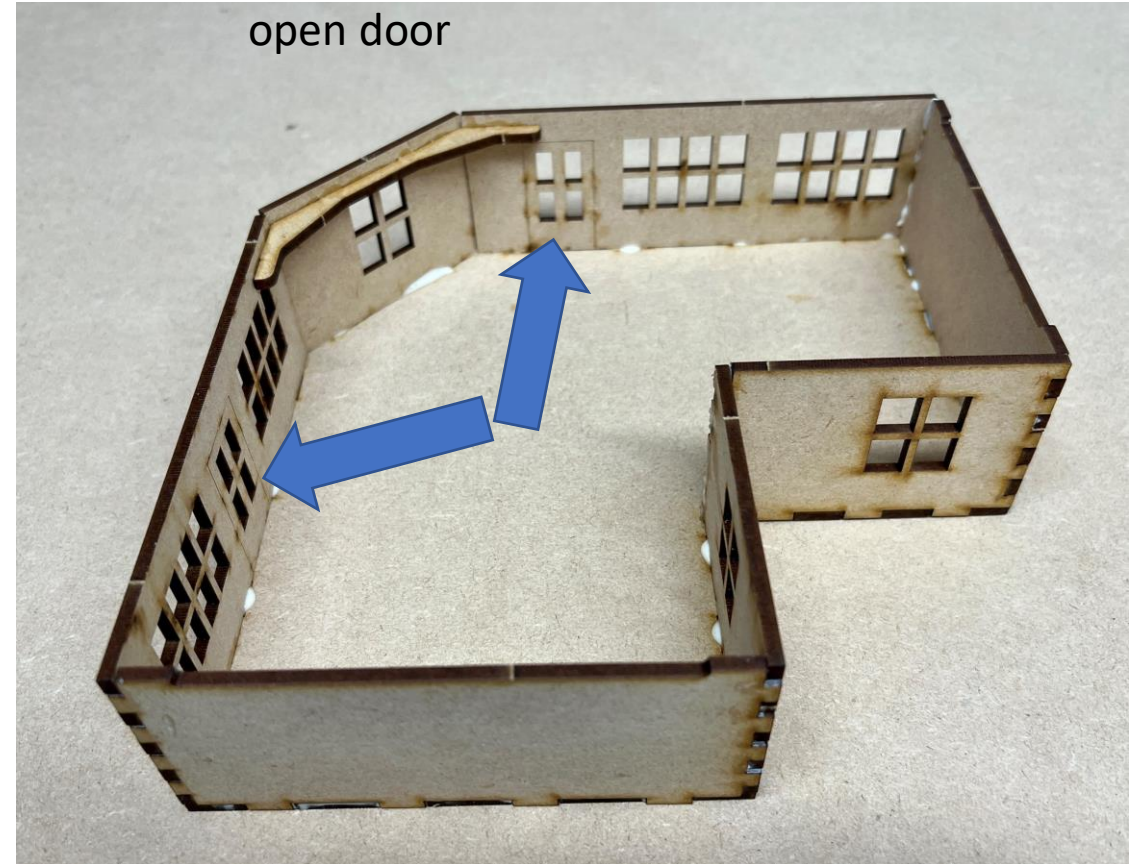
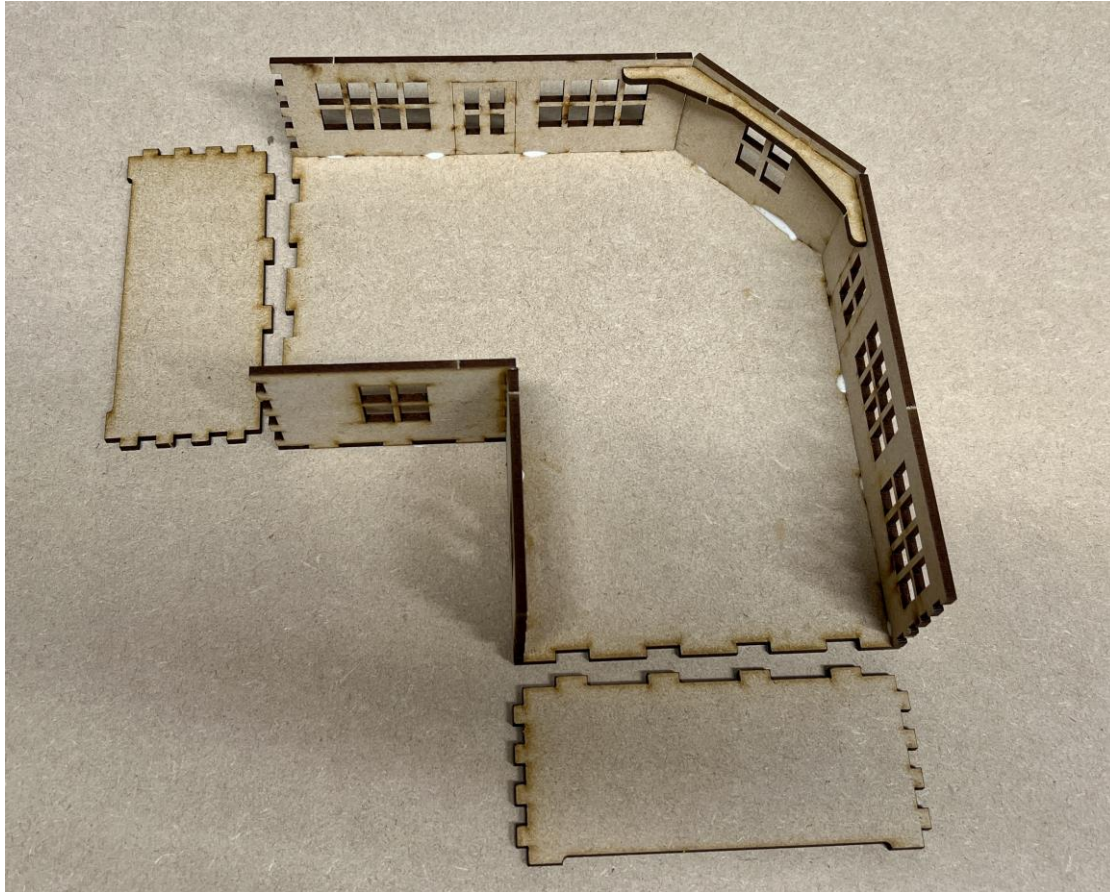





Upper Floors

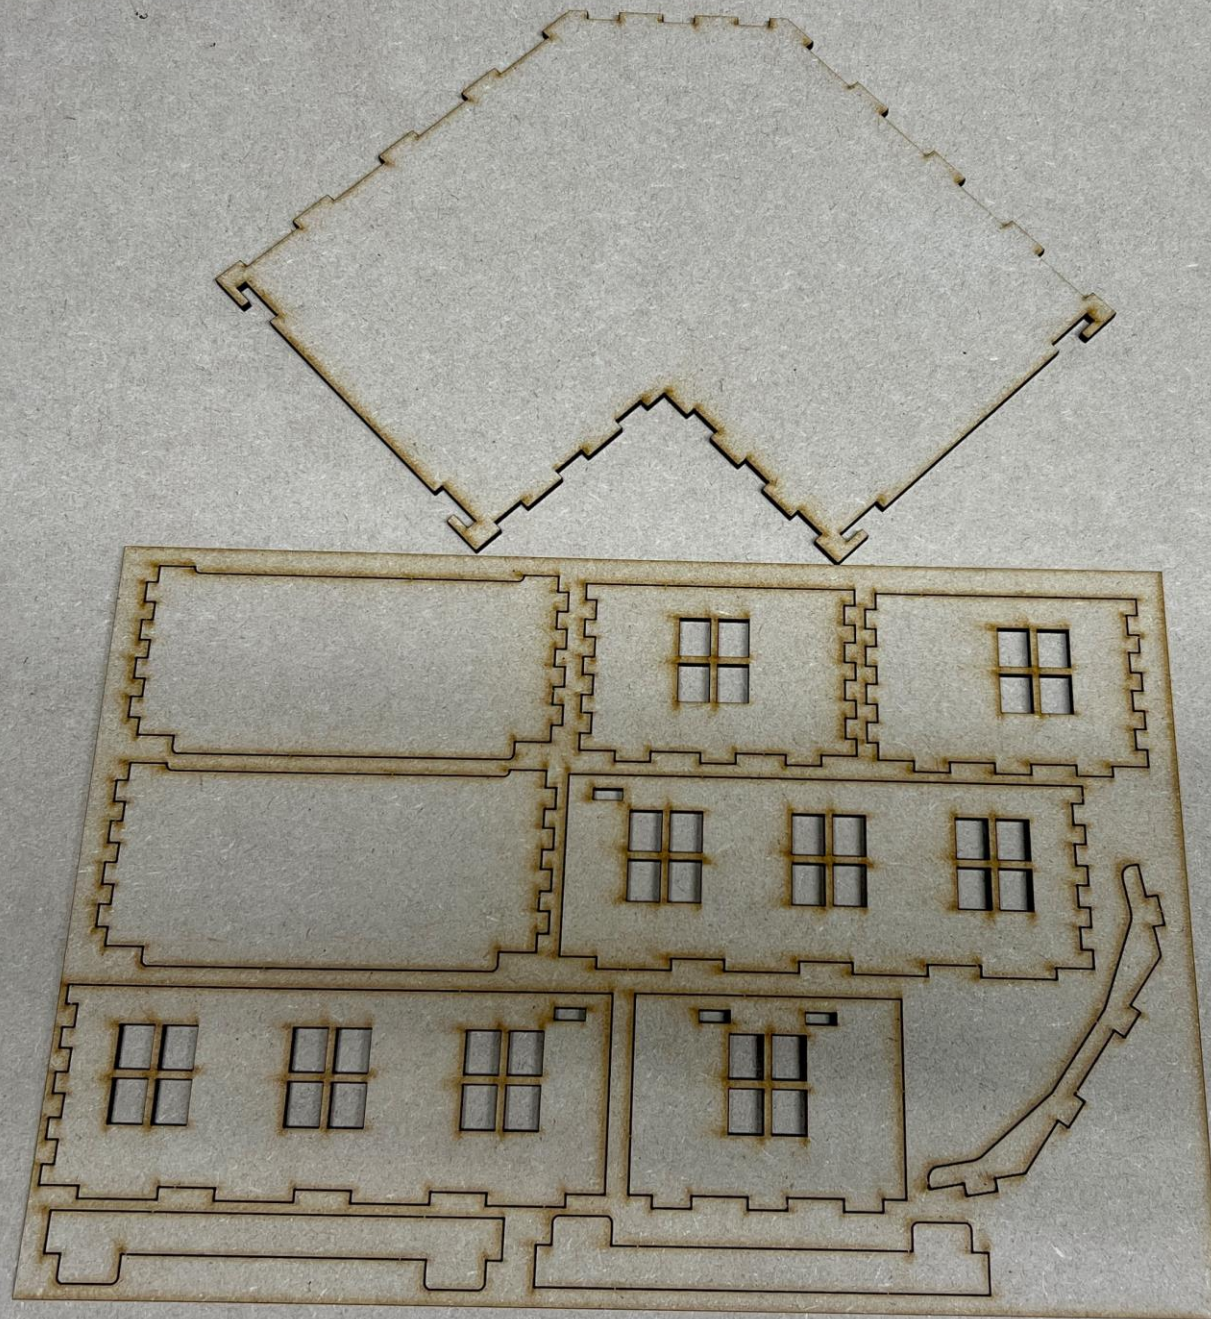



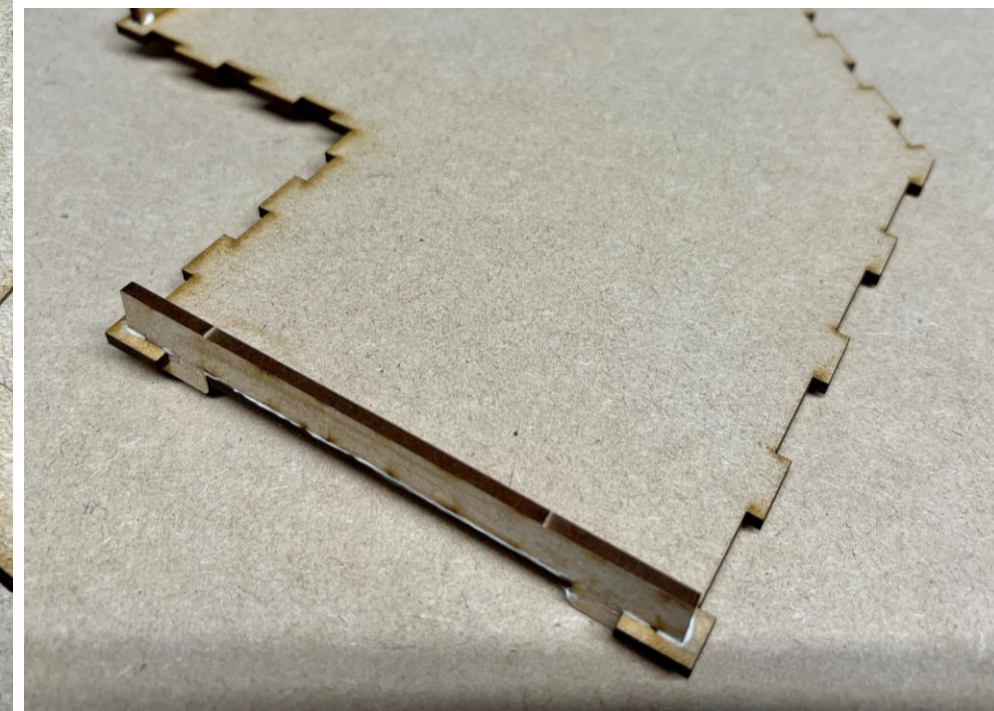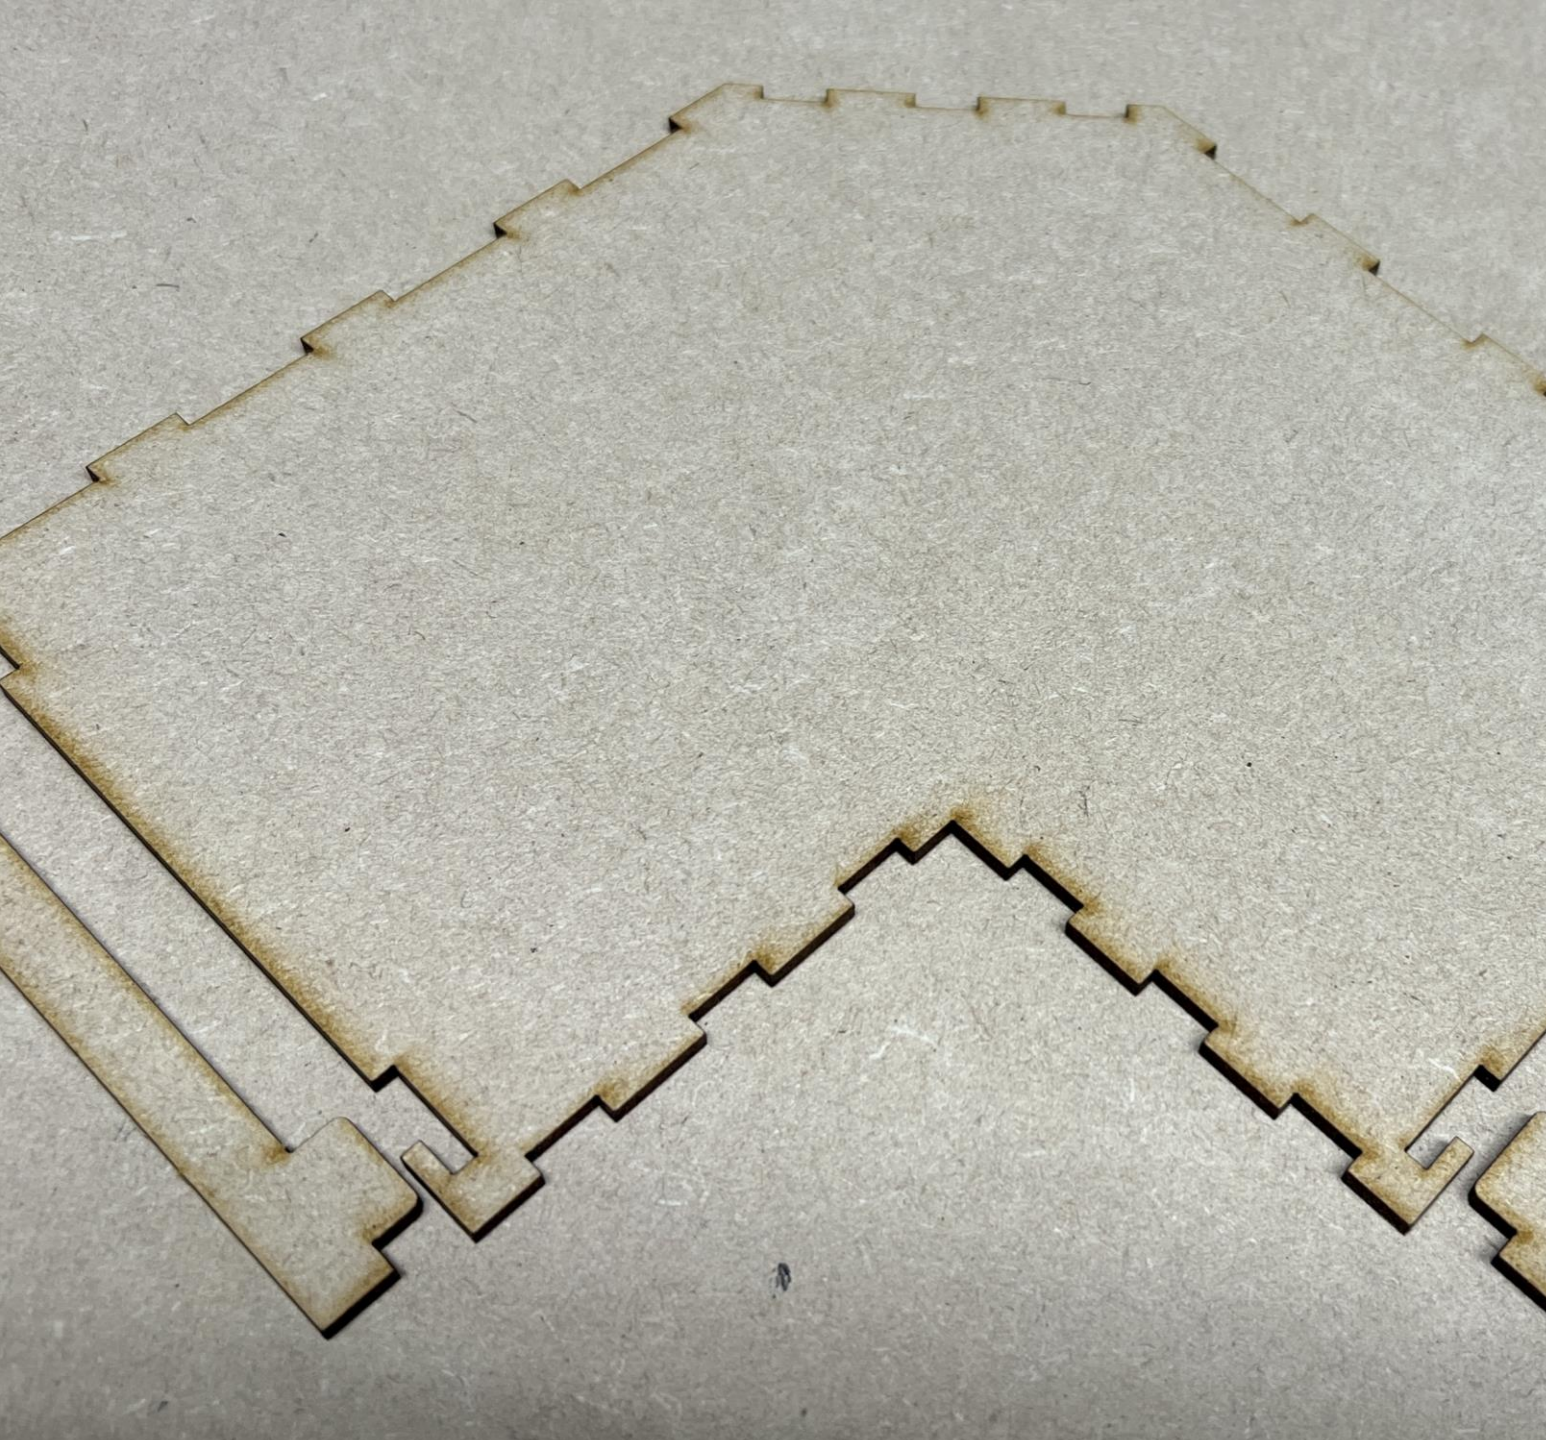




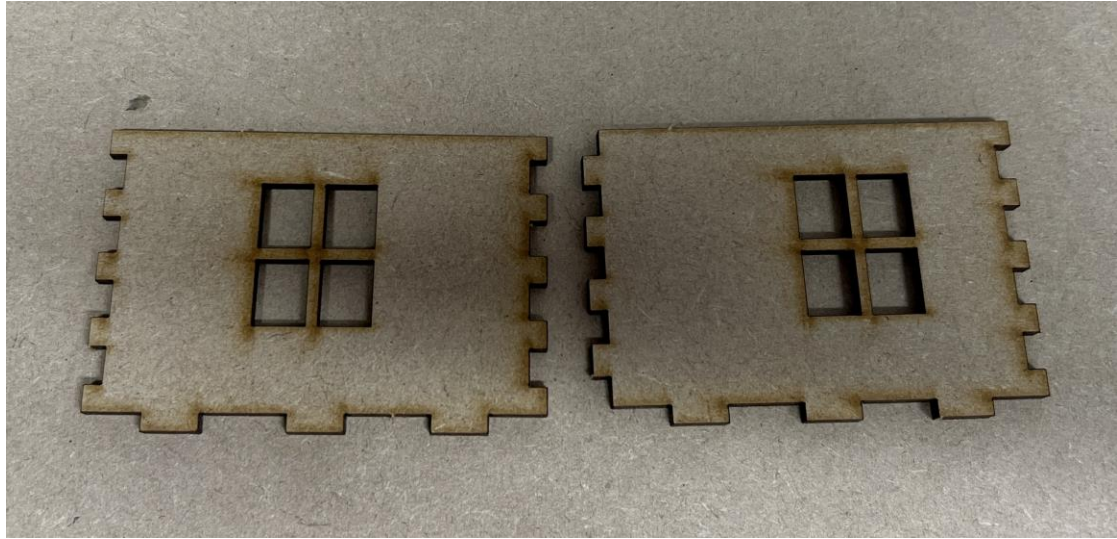










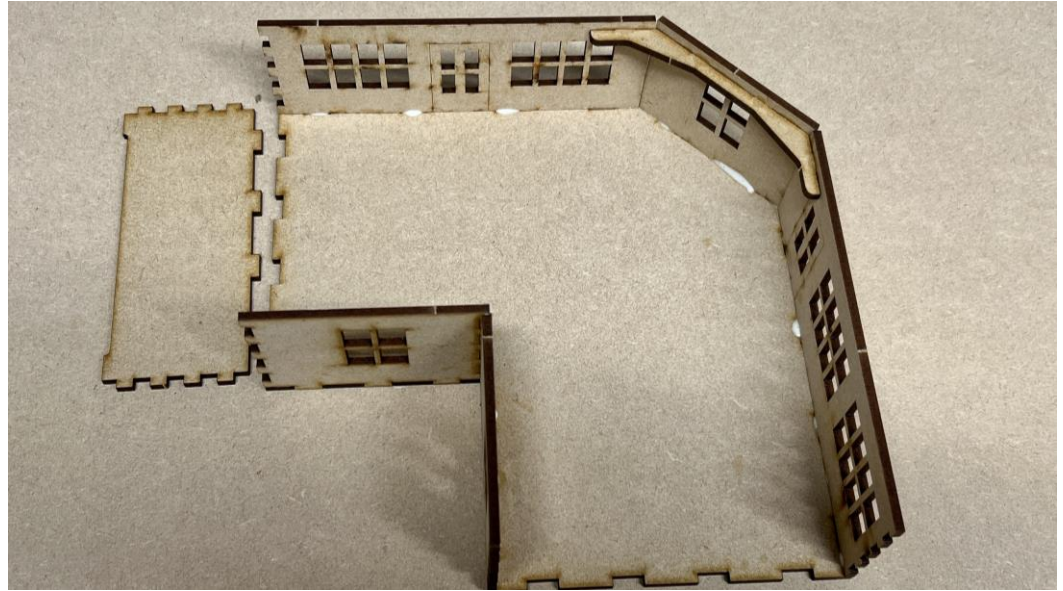







Roof

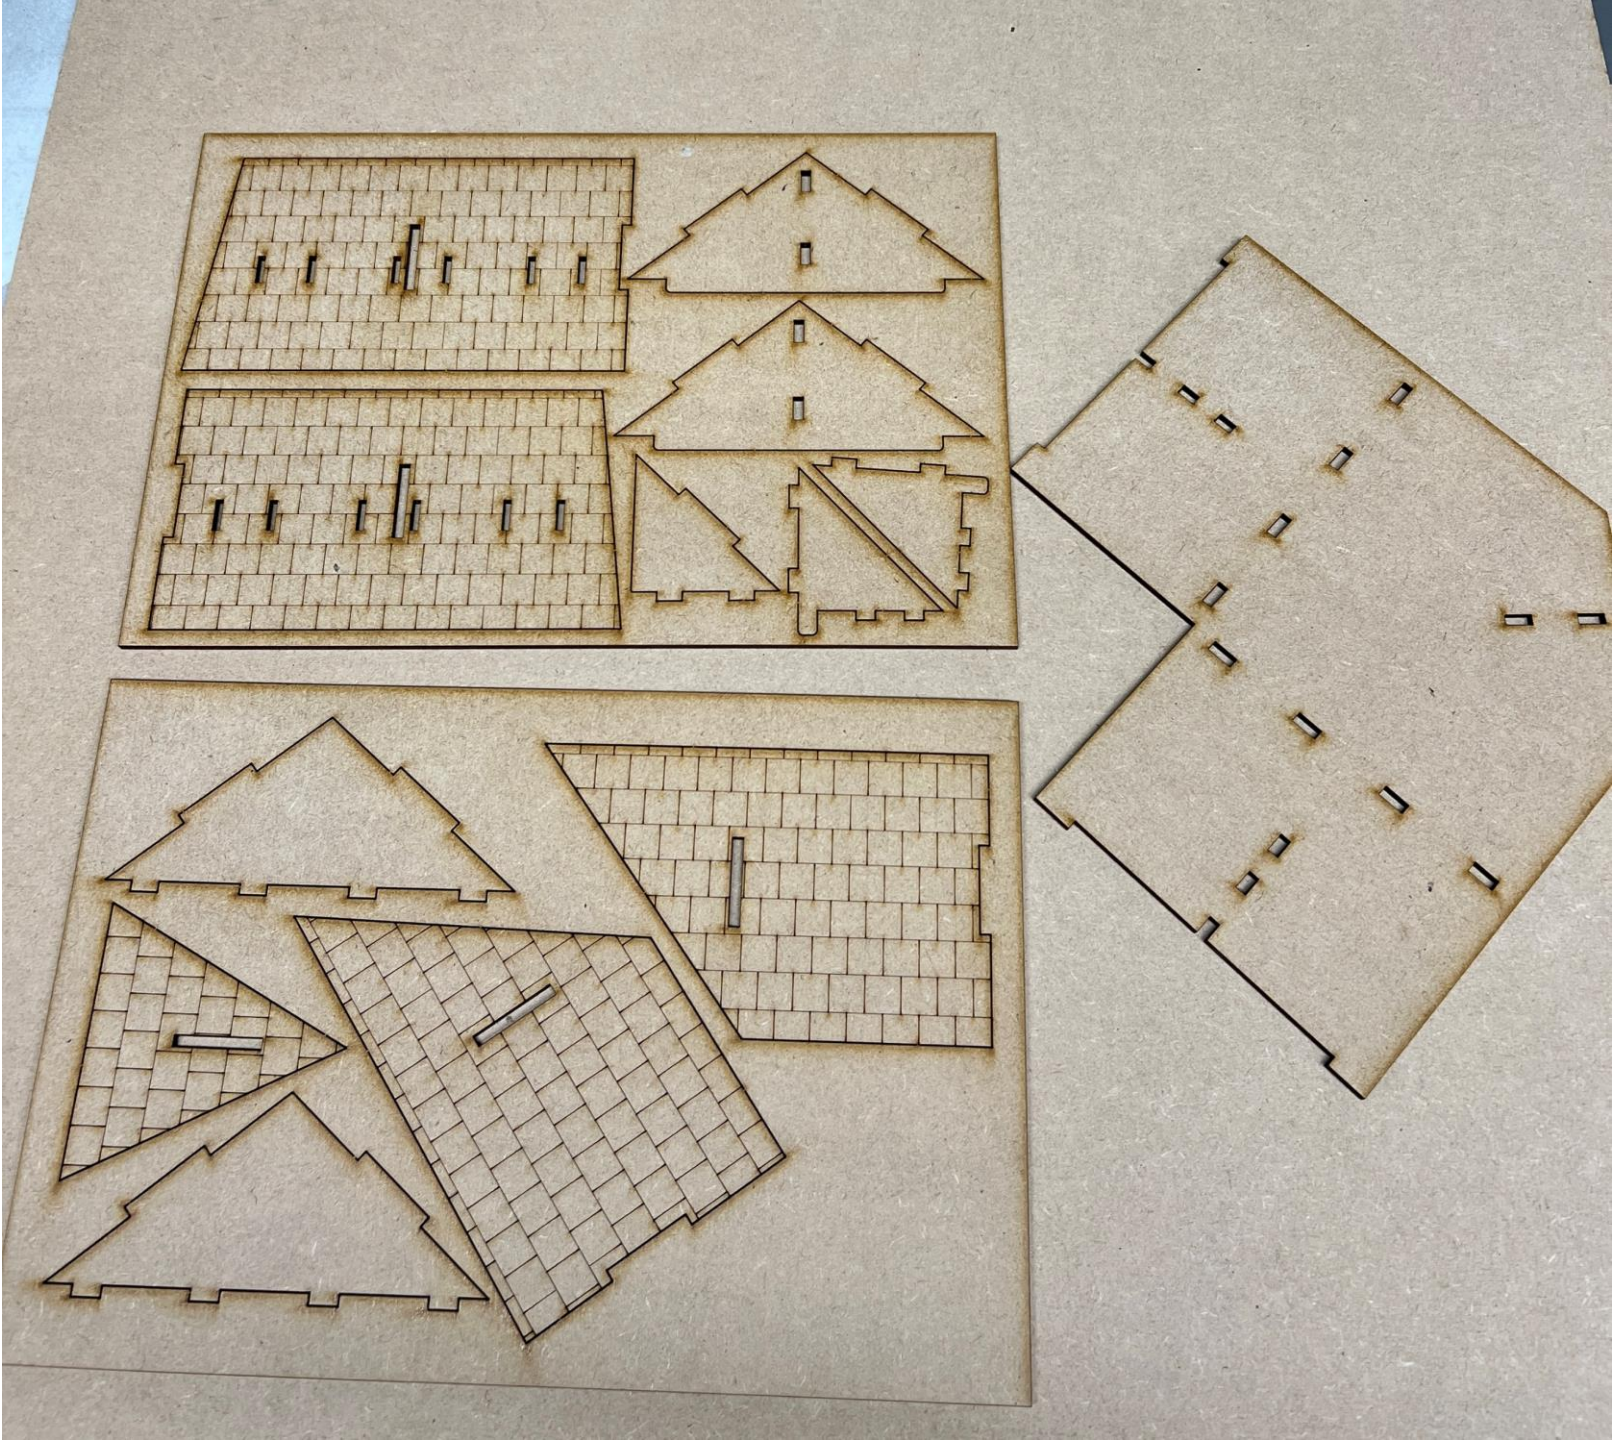





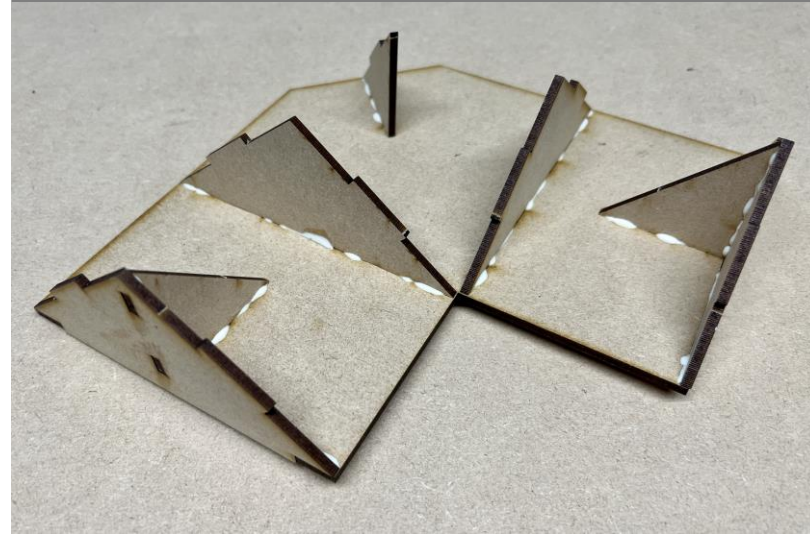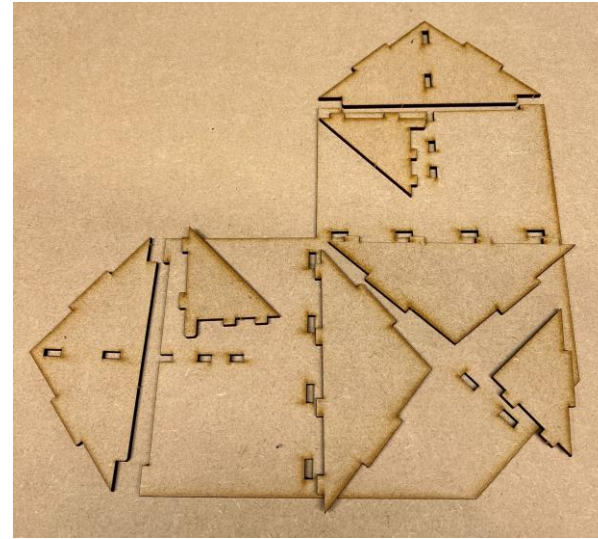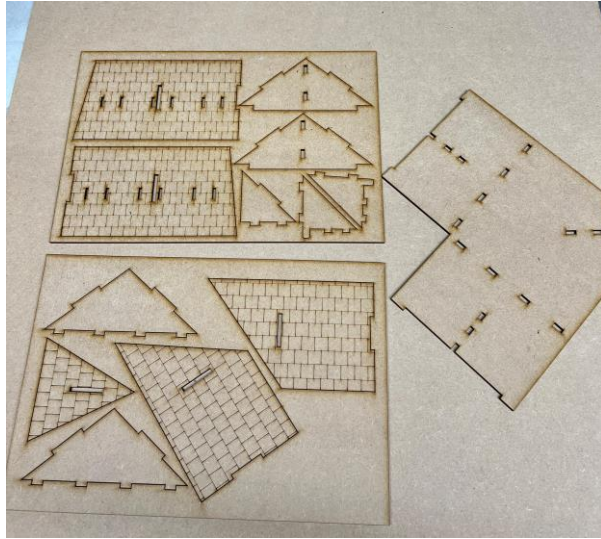




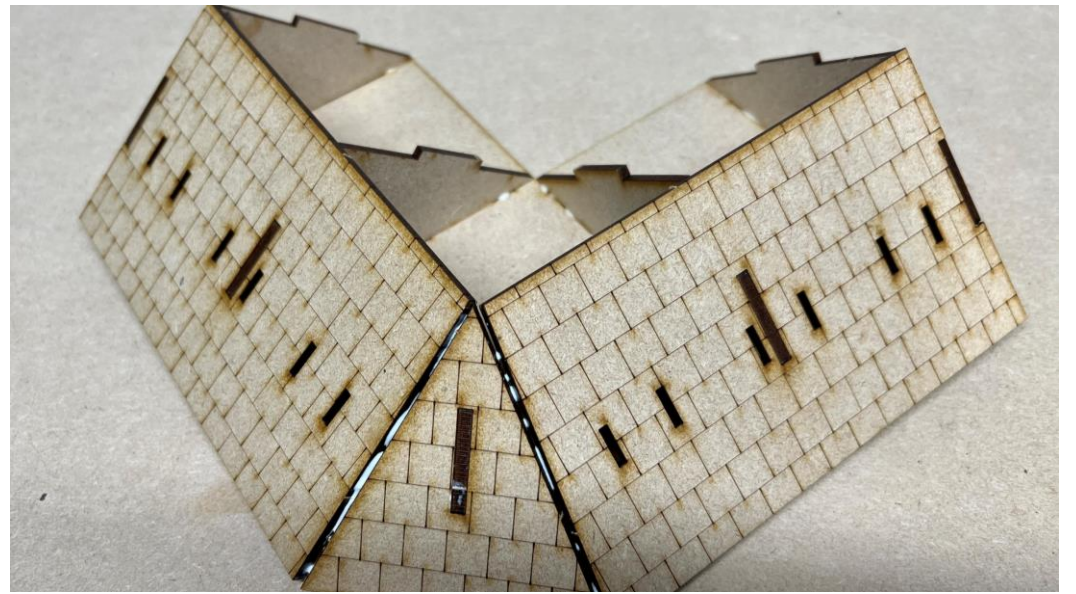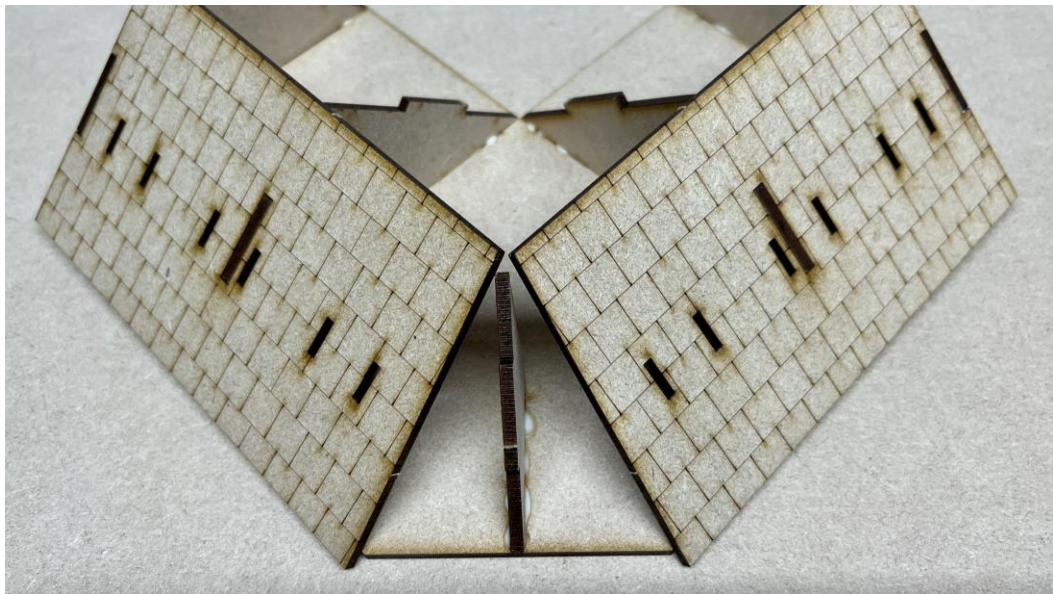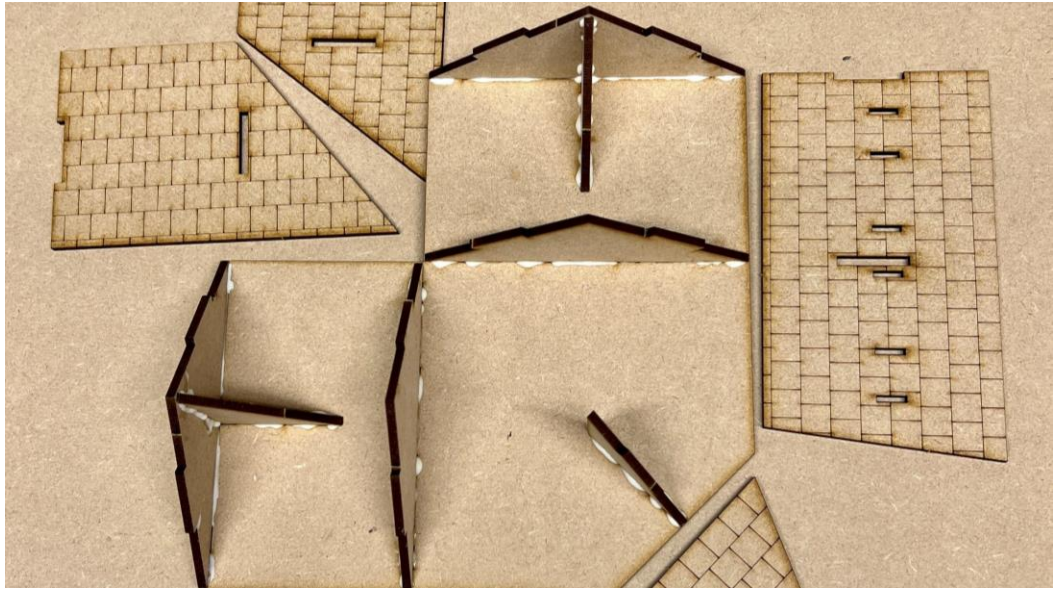




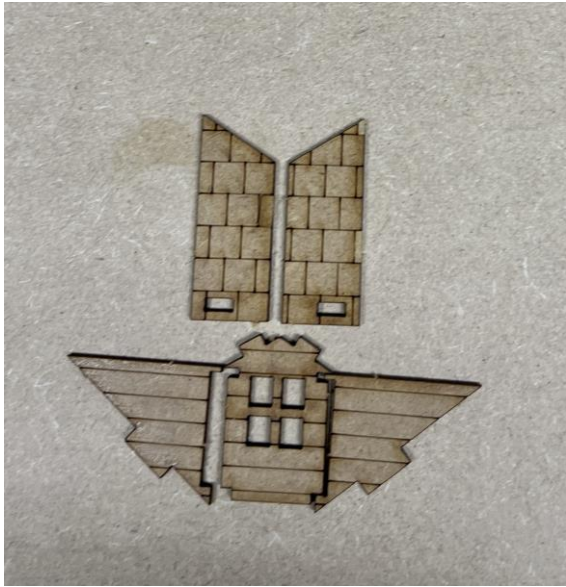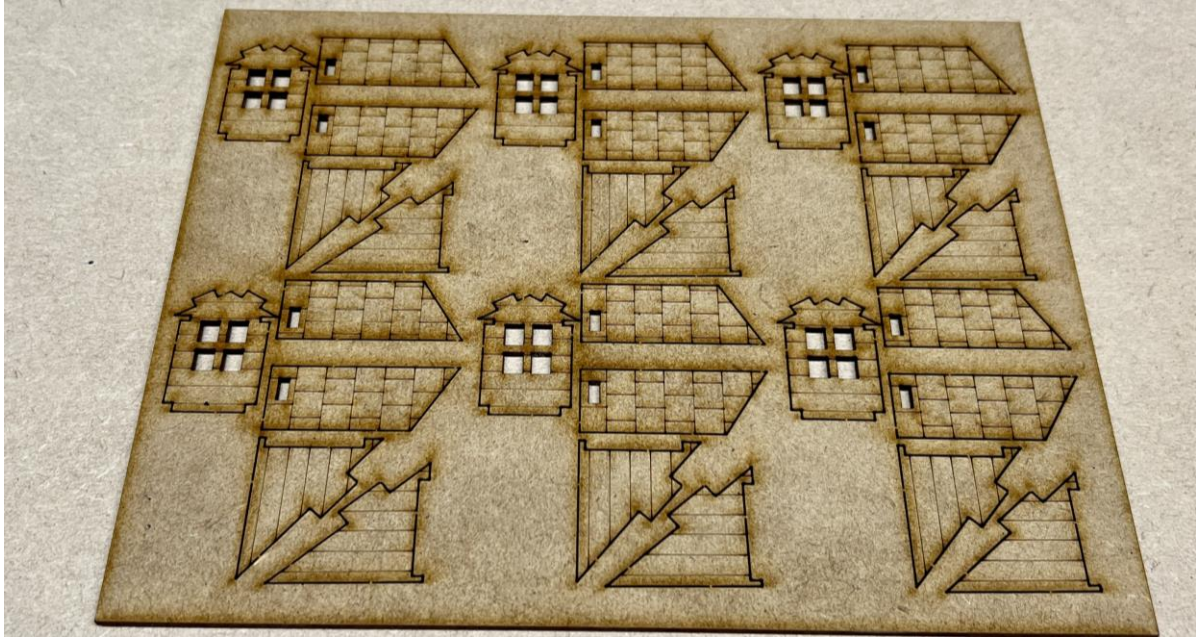


Glue all the supports in place & allow to dry

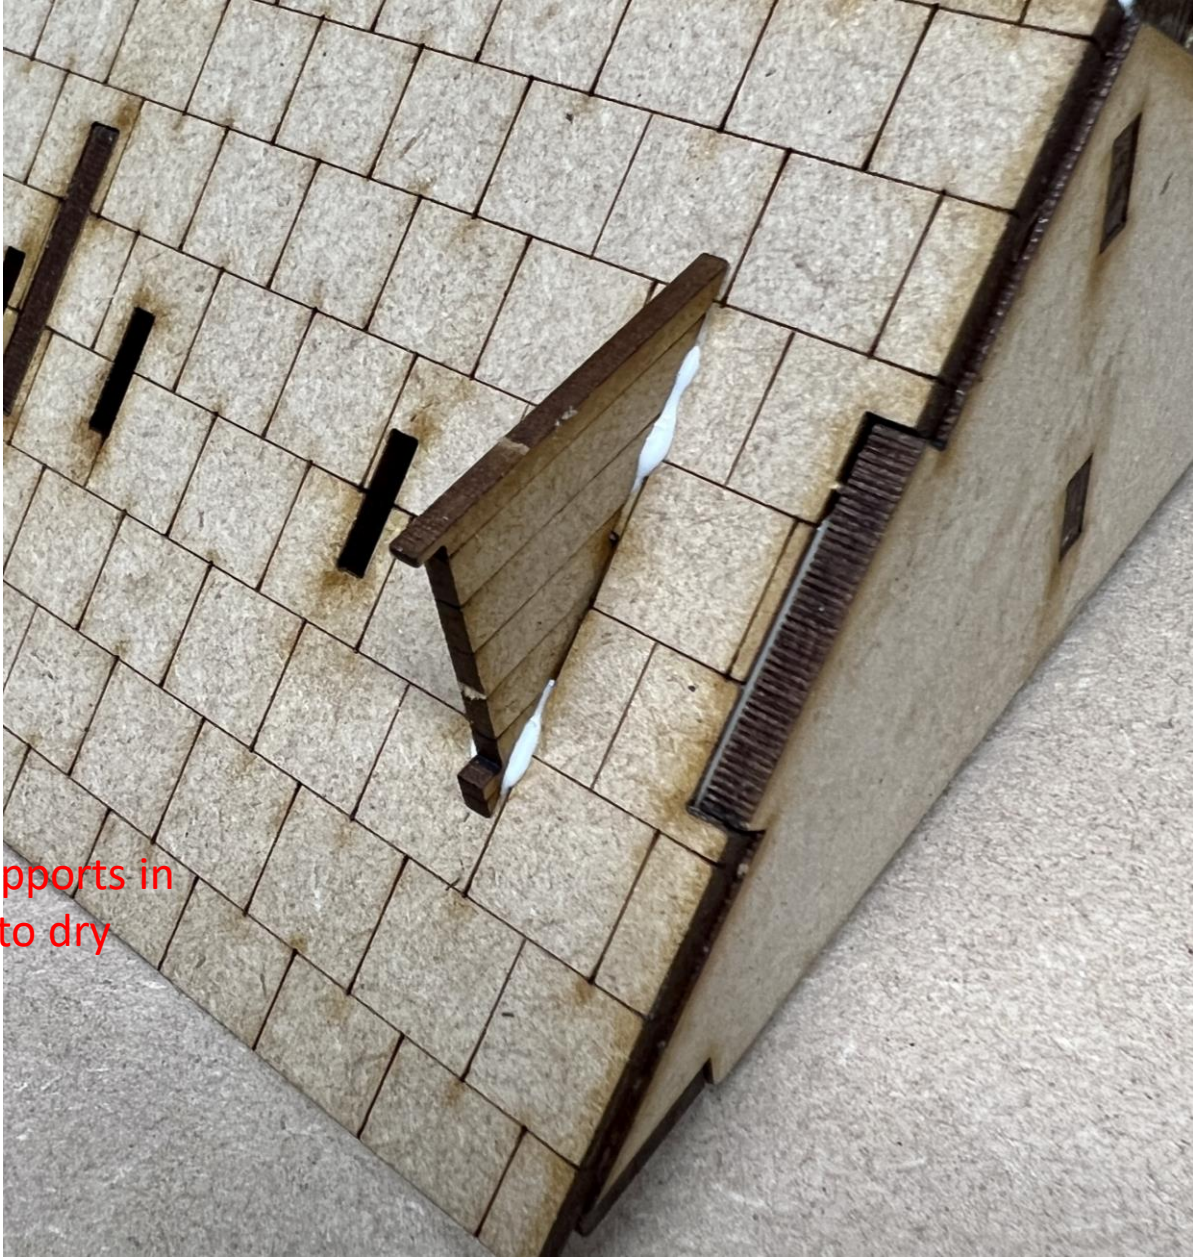




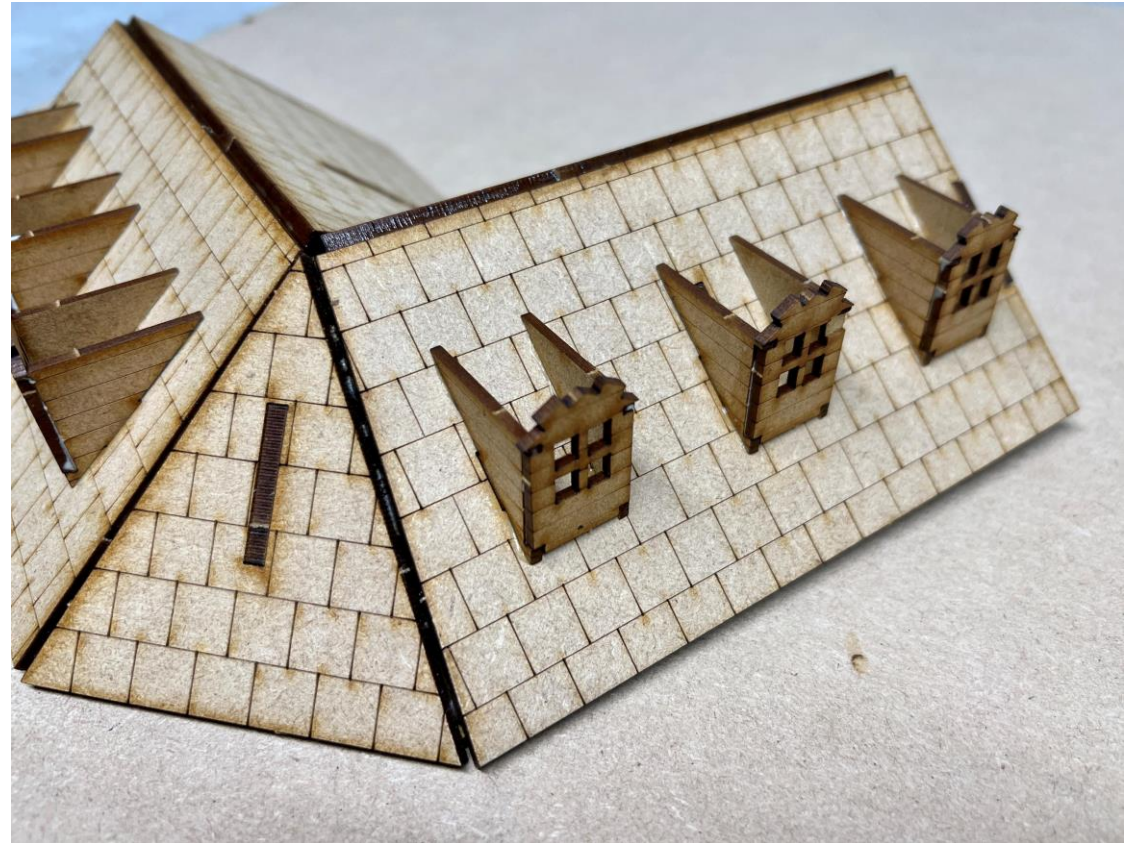




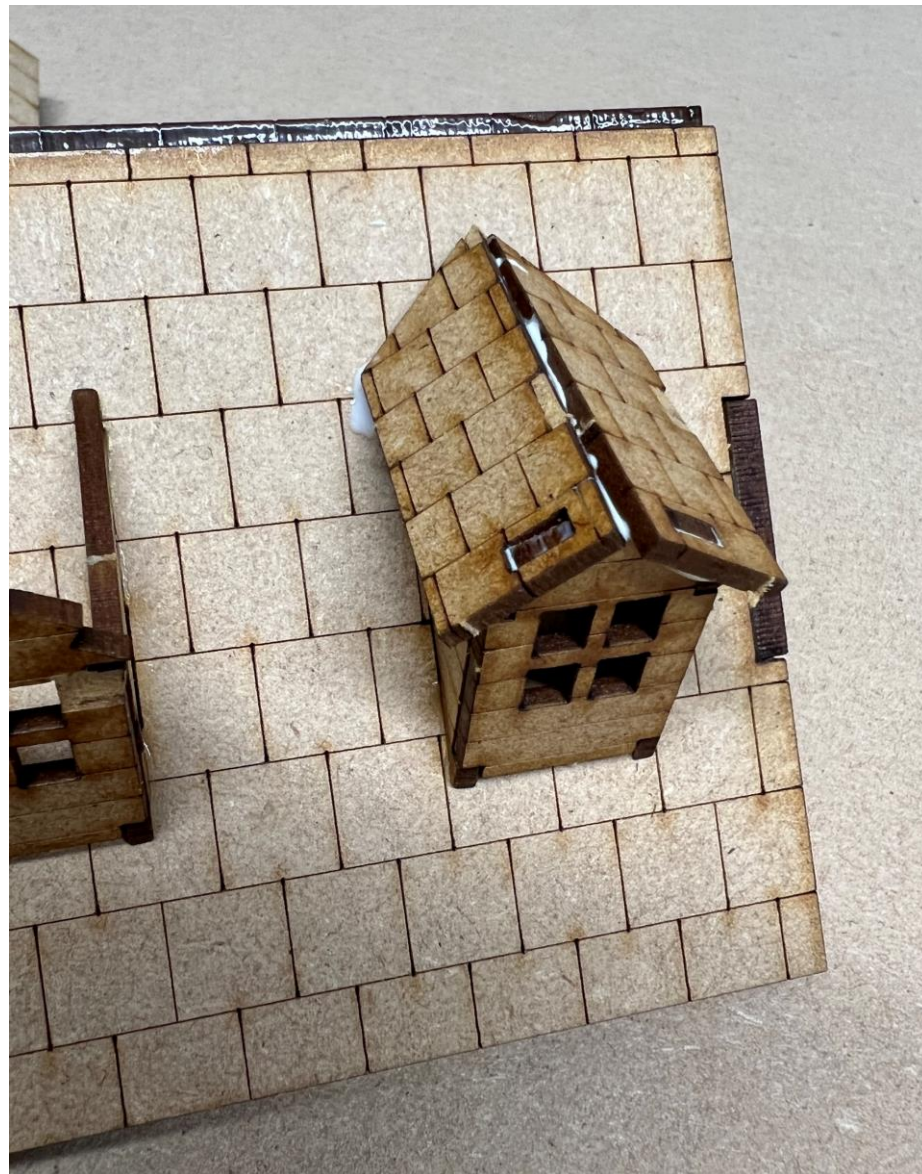




Use a craft knife to gently  
release frame tabs There are  
4 per frame

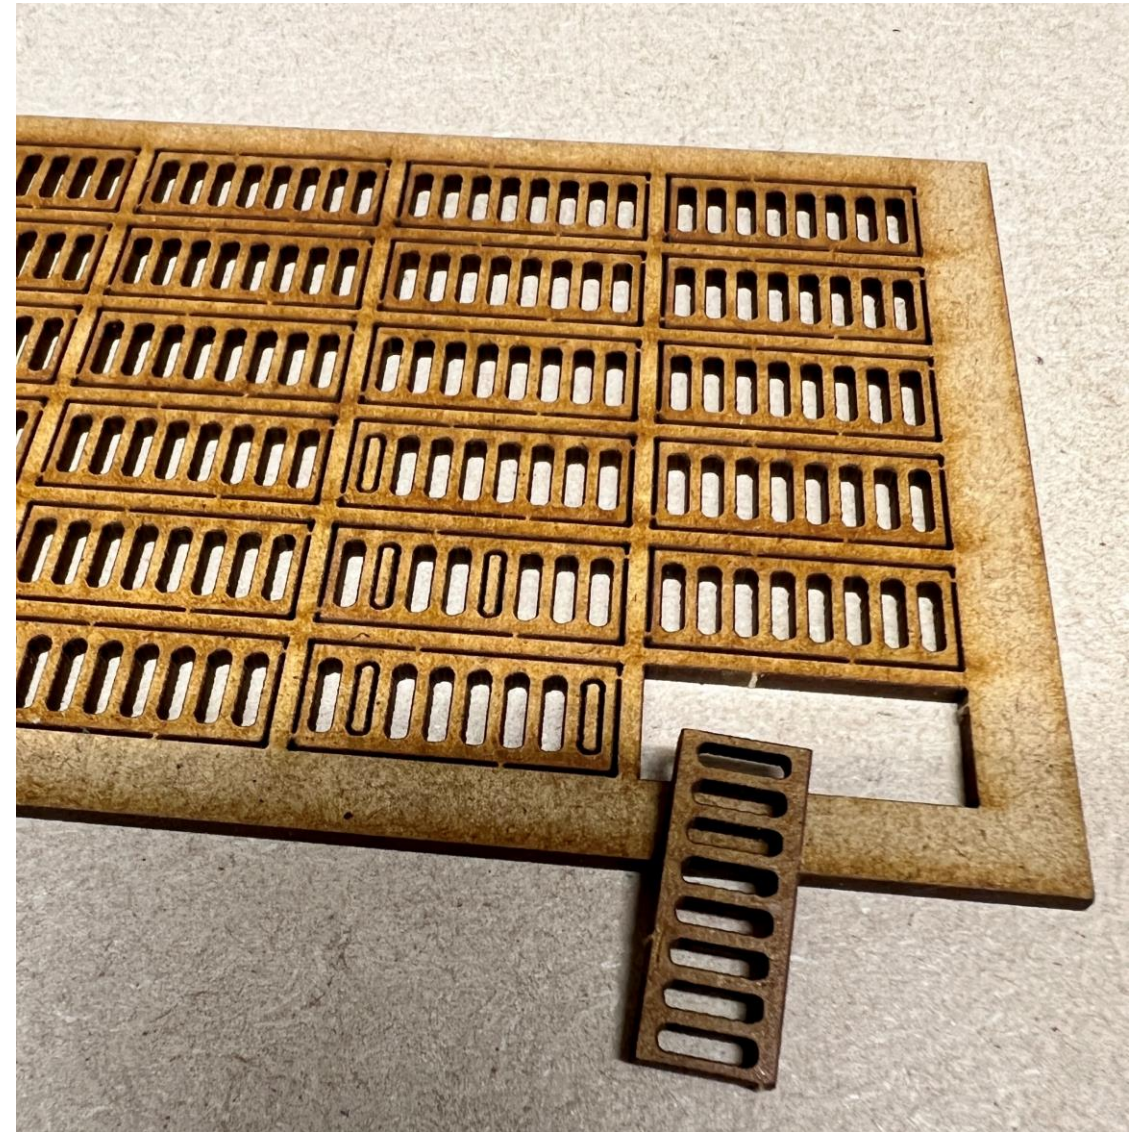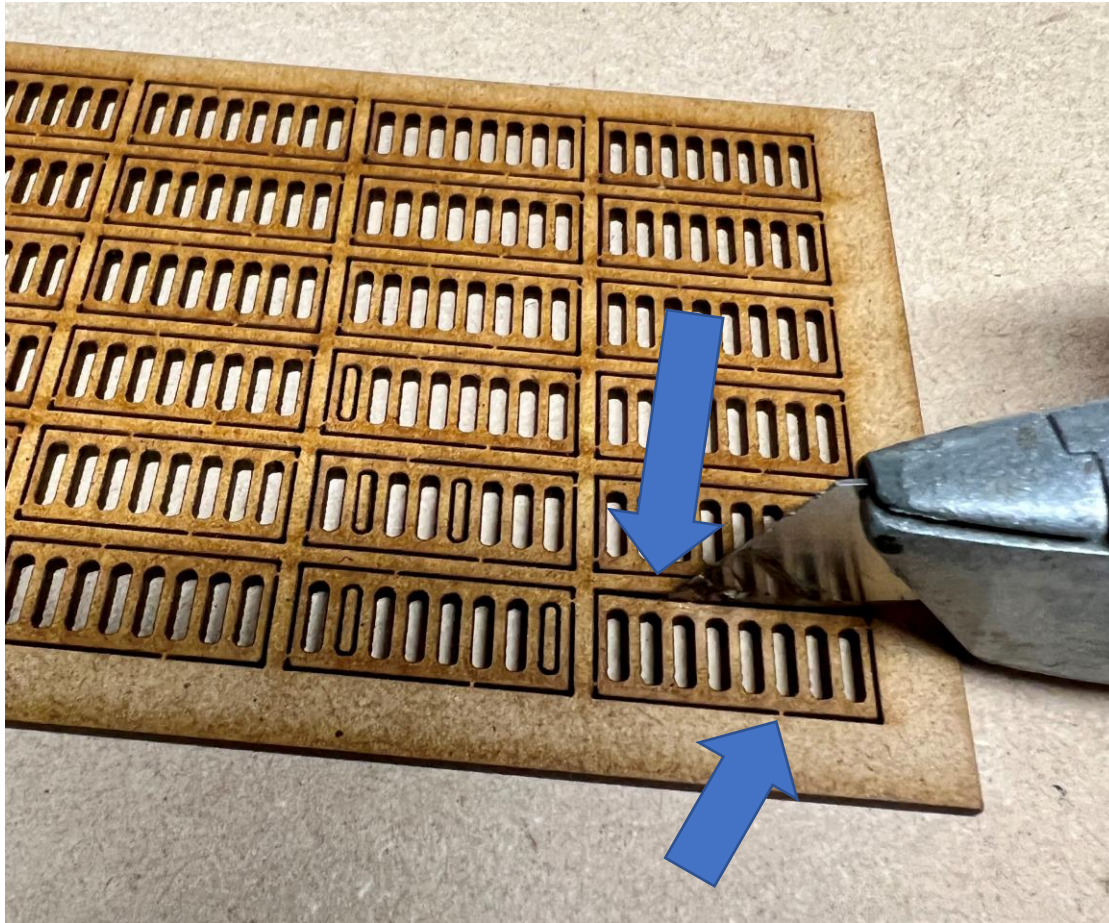



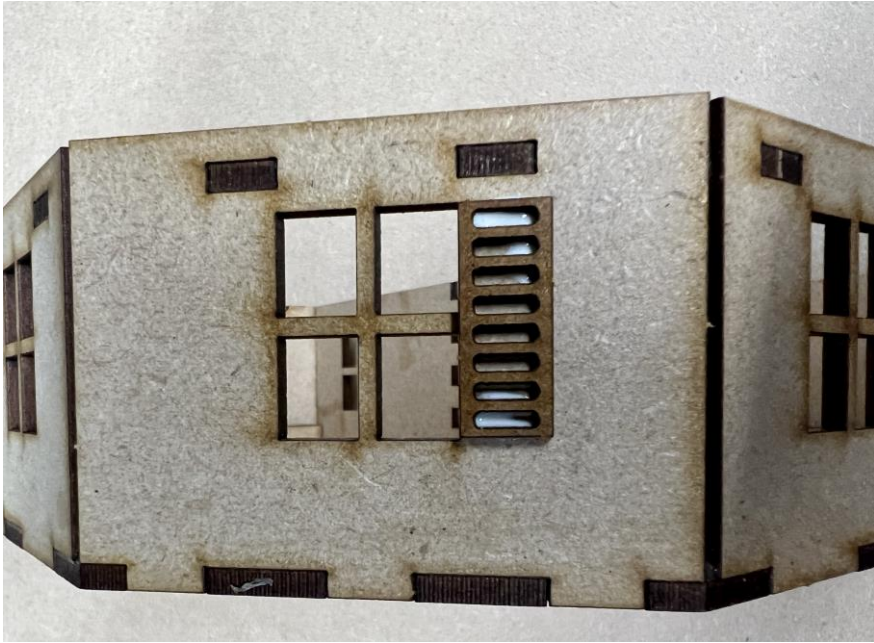

Glue the side blinds in  
place as required

---



