


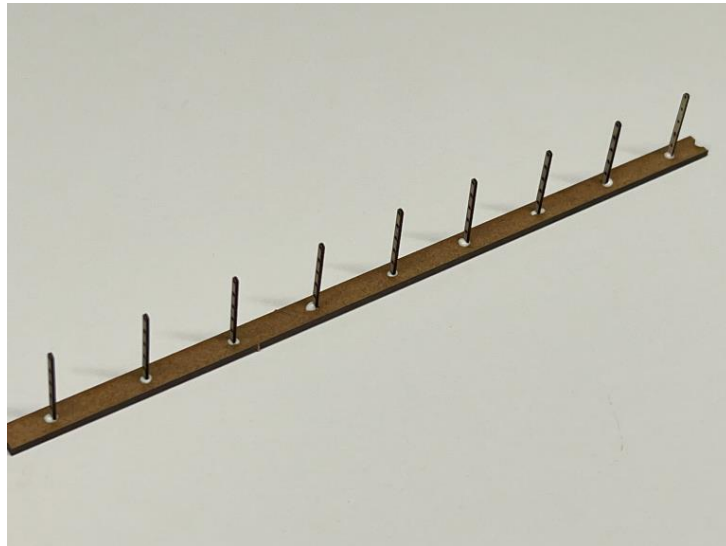


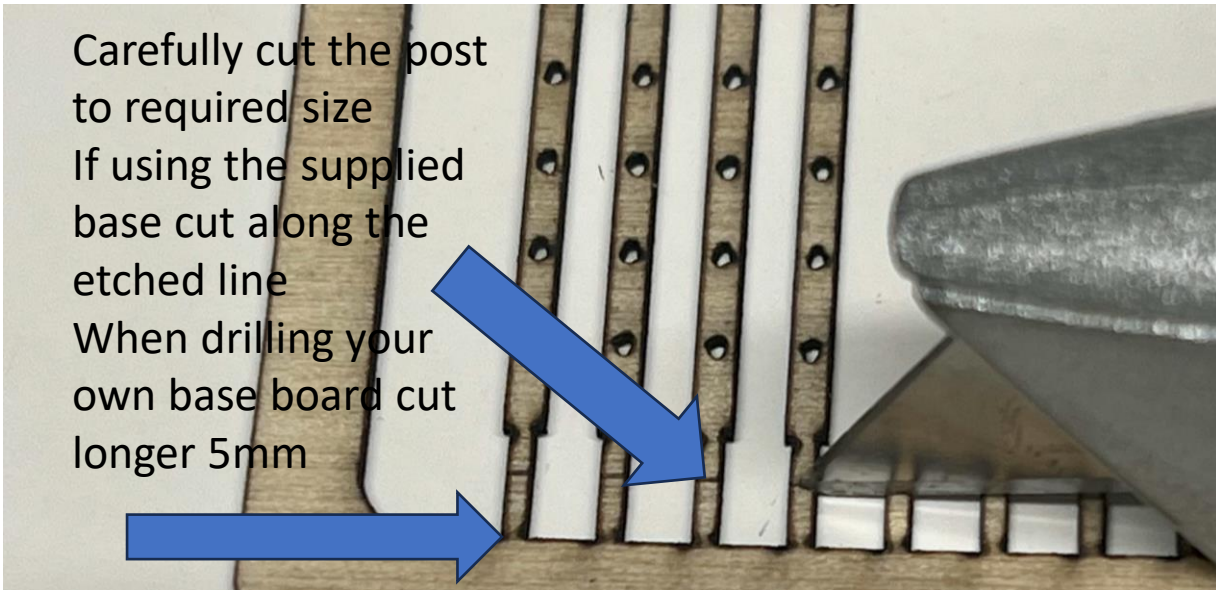


00Gauge Fencing

Assembly Guide

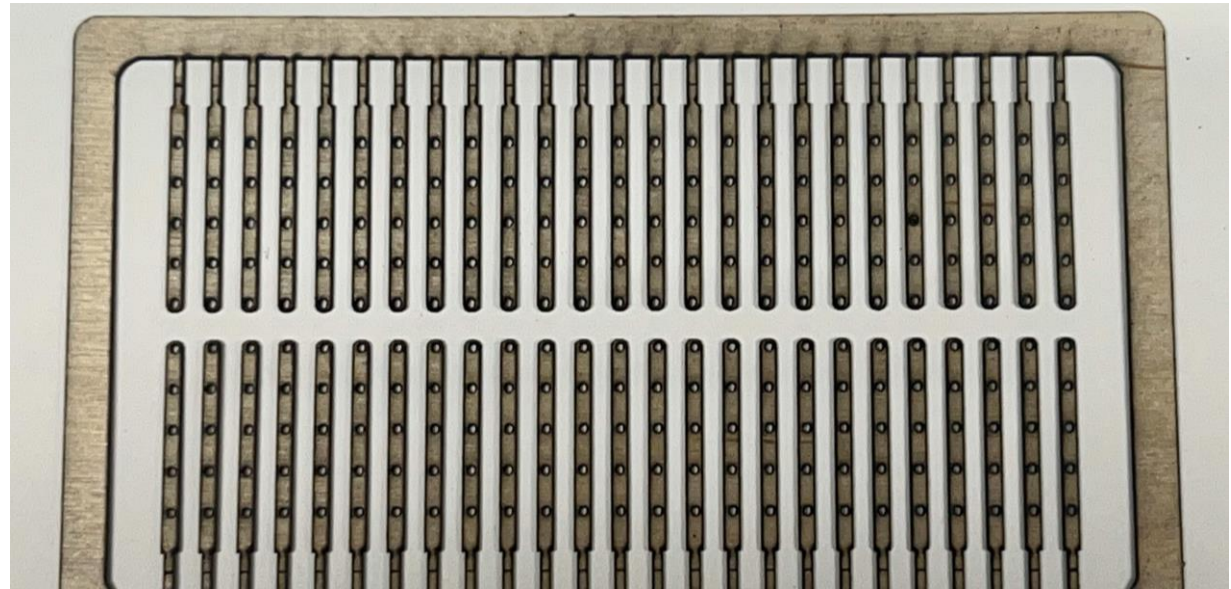


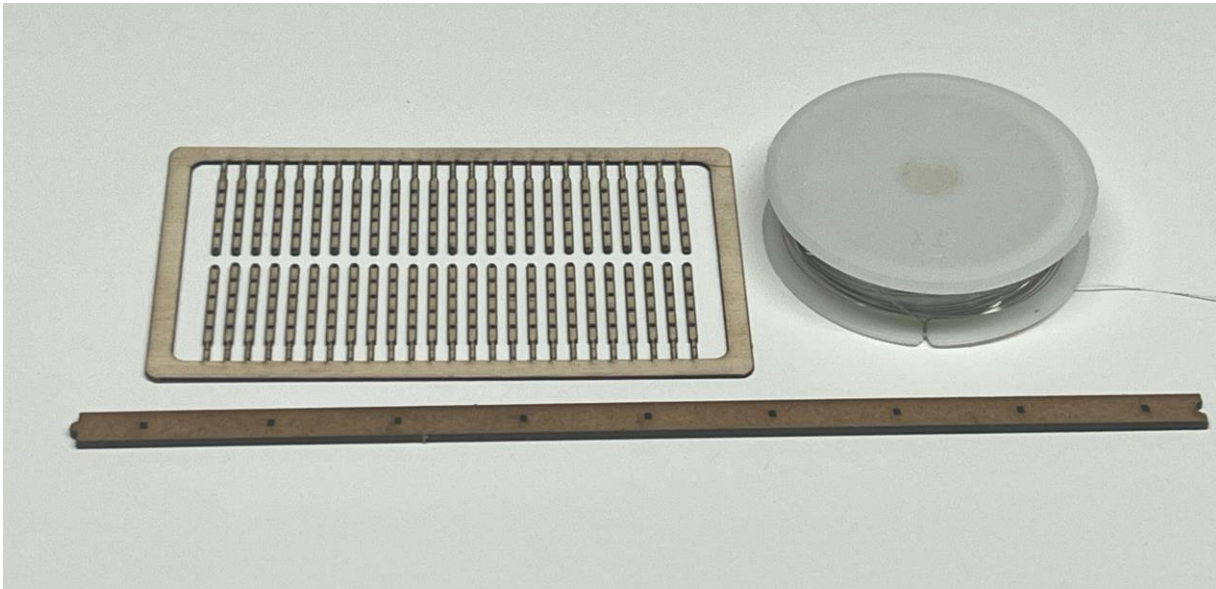


Carefully glue posts in place using PVA wood glue

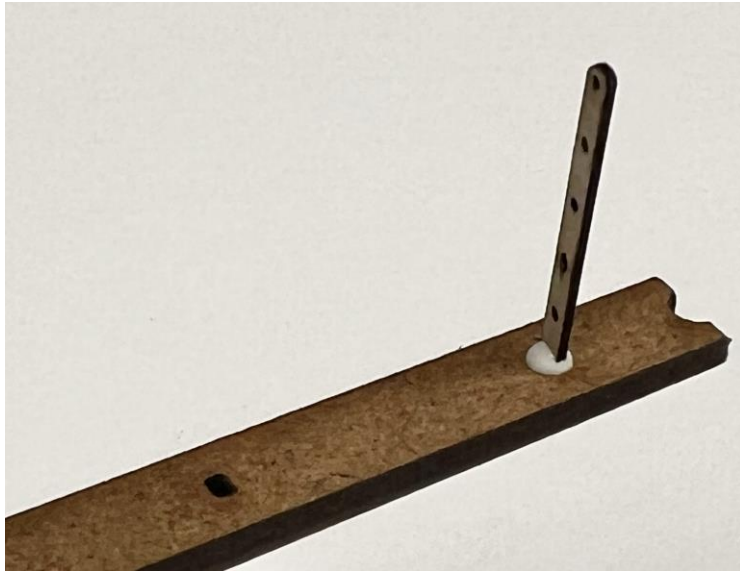

If you are predrilling your own base space the posts out at around 24mm

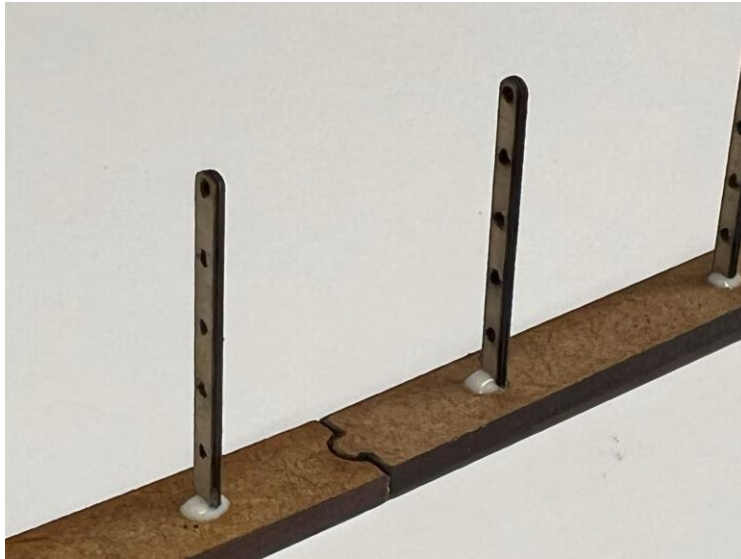

The holes in the supplied bases are on a 24mm pitch

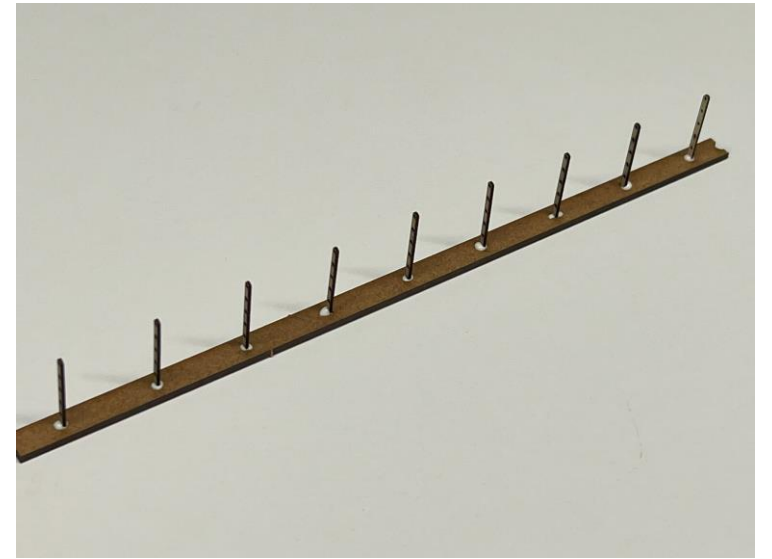



Lastly thread the supplied wire through the fence posts gluing wire in place as required
each roll of wire has approx. 12mtrs of 0.4mm wire

